



**Note: Unless you are sure of your part number, please email us your model & spec number so we can ensure you get the right part and that there are no further modifications required.**

Parts look up sometimes depends on a variety of issues (such as date code or other markings) The list below is derived from a "where used" search of either the part in question or a superseded (prior) part and can not take into account potential part variations that depend on other factors (such as date code) Unless you are 100% sure this is your part you should verify by looking the part up at either **[www.smallenginepartssuppliers.com](http://www.smallenginepartssuppliers.com)**

[www.smallenginepartssuppliers.com](http://www.smallenginepartssuppliers.com)

No claim of wrong part received will be honored based on the information presented in this file. You must have a WRITTEN (via email) recommendation to claim wrong part received.

The alternator or regulator below can be found at the following page:

[http://www.smallenginesuppliers.com/shop/html/pages/Briggs\\_Stratton\\_ignition\\_coil.html](http://www.smallenginesuppliers.com/shop/html/pages/Briggs_Stratton_ignition_coil.html)

Where Used: 698314

Model Name Diagram

122336-0116-B7 Controls, Governor Spring, Ignition  
122336-0116-B8 Controls, Governor Spring, Ignition  
122336-4238-B7 Controls, Governor Spring, Ignition  
122336-4238-B8 Controls, Governor Spring, Ignition  
122432-0033-E8 Controls, Governor Spring, Ignition  
122432-0036-E8 Controls, Governor Spring, Ignition  
122432-0100-B8 Controls, Governor Spring, Ignition  
122432-0100-E8 Controls, Governor Spring, Ignition  
122432-0110-01 Controls, Governor Spring, Ignition  
122432-0110-B1 Controls, Governor Spring, Ignition  
122432-0110-B8 Controls, Governor Spring, Ignition  
122432-0110-E1 Controls, Governor Spring, Ignition  
122432-0110-E8 Controls, Governor Spring, Ignition  
122432-0112-01 Controls, Governor Spring, Ignition  
122432-0112-B1 Controls, Governor Spring, Ignition  
122432-0112-B8 Controls, Governor Spring, Ignition  
122432-0112-E1 Controls, Governor Spring, Ignition  
122432-0112-E8 Controls, Governor Spring, Ignition  
122432-0113-01 Controls, Governor Spring, Ignition  
122432-0113-B1 Controls, Governor Spring, Ignition  
122432-0113-B8 Controls, Governor Spring, Ignition  
122432-0113-E1 Controls, Governor Spring, Ignition  
122432-0113-E8 Controls, Governor Spring, Ignition  
122432-0114-01 Controls, Governor Spring, Ignition  
122432-0114-B1 Controls, Governor Spring, Ignition

122432-0114-E1 Controls, Governor Spring, Ignition  
122432-0114-E8 Controls, Governor Spring, Ignition

Page 1 of 10

122432-0115-01 Controls, Governor Spring, Ignition  
122432-0115-B1 Controls, Governor Spring, Ignition  
122432-0115-B8 Controls, Governor Spring, Ignition  
122432-0115-E1 Controls, Governor Spring, Ignition  
122432-0115-E8 Controls, Governor Spring, Ignition  
122432-0118-01 Controls, Governor Spring, Ignition  
122432-0118-B1 Controls, Governor Spring, Ignition  
122432-0118-B8 Controls, Governor Spring, Ignition  
122432-0118-E1 Controls, Governor Spring, Ignition  
122432-0118-E8 Controls, Governor Spring, Ignition  
122432-0119-01 Controls, Governor Spring, Ignition  
122432-0119-B1 Controls, Governor Spring, Ignition  
122432-0119-B8 Controls, Governor Spring, Ignition  
122432-0119-E1 Controls, Governor Spring, Ignition  
122432-0119-E8 Controls, Governor Spring, Ignition  
122432-0120-01 Controls, Governor Spring, Ignition  
122432-0120-B1 Controls, Governor Spring, Ignition  
122432-0120-B8 Controls, Governor Spring, Ignition  
122432-0120-E1 Controls, Governor Spring, Ignition  
122432-0120-E8 Controls, Governor Spring, Ignition  
122432-0122-B1 Controls, Governor Spring, Ignition  
122432-0122-B8 Controls, Governor Spring, Ignition  
122432-0122-E1 Controls, Governor Spring, Ignition  
122432-0122-E8 Controls, Governor Spring, Ignition  
122432-0123-B1 Controls, Governor Spring, Ignition  
122432-0123-B8 Controls, Governor Spring, Ignition  
122432-0123-E1 Controls, Governor Spring, Ignition  
122432-0123-E8 Controls, Governor Spring, Ignition  
122432-0124-B1 Controls, Governor Spring, Ignition

Page 2 of 10

122432-0124-B8 Controls, Governor Spring, Ignition  
122432-0124-E1 Controls, Governor Spring, Ignition  
122432-0124-E8 Controls, Governor Spring, Ignition  
122432-0125-B1 Controls, Governor Spring, Ignition  
122432-0125-B8 Controls, Governor Spring, Ignition  
122432-0125-E1 Controls, Governor Spring, Ignition  
122432-0125-E8 Controls, Governor Spring, Ignition  
122432-0127-01 Controls, Governor Spring, Ignition  
122432-0127-B8 Controls, Governor Spring, Ignition  
122432-0127-E8 Controls, Governor Spring, Ignition  
122432-0128-B8 Controls, Governor Spring, Ignition  
122432-0128-E8 Controls, Governor Spring, Ignition  
122432-0129-B1 Controls, Governor Spring, Ignition  
122432-0129-B8 Controls, Governor Spring, Ignition  
122432-0129-E1 Controls, Governor Spring, Ignition  
122432-0129-E8 Controls, Governor Spring, Ignition  
122432-0132-B8 Controls, Governor Spring, Ignition  
122432-0132-E8 Controls, Governor Spring, Ignition  
122432-0135-01 Controls, Governor Spring, Ignition

122432-0136-B8 Controls, Governor Spring, Ignition  
122432-0136-E8 Controls, Governor Spring, Ignition  
122432-0137-01 Controls, Governor Spring, Ignition  
122432-0138-B8 Controls, Governor Spring, Ignition  
122432-0138-E8 Controls, Governor Spring, Ignition  
122432-0139-B8 Controls, Governor Spring, Ignition  
122432-0139-E8 Controls, Governor Spring, Ignition  
122432-0146-01 Controls, Governor Spring, Ignition  
122432-0146-B8 Controls, Governor Spring, Ignition  
122432-0146-E8 Controls, Governor Spring, Ignition

Page 3 of 10

122432-0151-01 Controls, Governor Spring, Ignition  
122432-0152-B8 Controls, Governor Spring, Ignition  
122432-0152-E8 Controls, Governor Spring, Ignition  
122432-0157-B8 Controls, Governor Spring, Ignition  
122432-0157-E8 Controls, Governor Spring, Ignition  
122432-0159-01 Controls, Governor Spring, Ignition  
122432-0160-B8 Controls, Governor Spring, Ignition  
122432-0160-E8 Controls, Governor Spring, Ignition  
122432-0162-01 Controls, Governor Spring, Ignition  
122432-0167-B8 Controls, Governor Spring, Ignition  
122432-0167-E8 Controls, Governor Spring, Ignition  
122432-0168-01 Controls, Governor Spring, Ignition  
122432-0169-01 Controls, Governor Spring, Ignition  
122432-0170-01 Controls, Governor Spring, Ignition  
122432-0173-B8 Controls, Governor Spring, Ignition  
122432-0173-E8 Controls, Governor Spring, Ignition  
122432-0174-B8 Controls, Governor Spring, Ignition  
122432-0174-E8 Controls, Governor Spring, Ignition  
122432-0176-01 Controls, Governor Spring, Ignition  
122432-0178-B8 Controls, Governor Spring, Ignition  
122432-0178-E8 Controls, Governor Spring, Ignition  
122432-0180-01 Controls, Governor Spring, Ignition  
122432-0182-01 Controls, Governor Spring, Ignition  
122432-0187-B8 Controls, Governor Spring, Ignition  
122432-0188-B8 Controls, Governor Spring, Ignition  
122432-0194-B8 Controls, Governor Spring, Ignition  
122432-0195-B8 Controls, Governor Spring, Ignition  
122432-0196-B8 Controls, Governor Spring, Ignition  
122432-0197-B8 Controls, Governor Spring, Ignition

Page 4 of 10

122432-0199-B8 Controls, Governor Spring, Ignition  
122432-0200-B8 Controls, Governor Spring, Ignition  
122432-0203-01 Controls, Governor Spring, Ignition  
122432-0207-01 Controls, Governor Spring, Ignition  
122432-0210-01 Controls, Governor Spring, Ignition  
122432-0211-B8 Controls, Governor Spring, Ignition  
122432-0211-E8 Controls, Governor Spring, Ignition  
122432-0214-01 Controls, Governor Spring, Ignition  
122432-0223-01 Controls, Governor Spring, Ignition  
122432-0224-01 Controls, Governor Spring, Ignition  
122432-0225-01 Controls, Governor Spring, Ignition

122432-0226-01 Controls, Governor Spring, Ignition  
122432-0227-01 Controls, Governor Spring, Ignition  
122432-0234-01 Controls, Governor Spring, Ignition  
122432-0237-01 Controls, Governor Spring, Ignition  
122432-0239-01 Controls, Governor Spring, Ignition  
122432-0240-01 Controls, Governor Spring, Ignition  
122432-0241-01 Controls, Governor Spring, Ignition  
122432-0242-01 Controls, Governor Spring, Ignition  
122432-0249-01 Controls, Governor Spring, Ignition  
122432-0250-B8 Controls, Governor Spring, Ignition  
122432-0252-B8 Controls, Governor Spring, Ignition  
122435-0243-01 Controls, Governor Spring, Ignition  
122436-0230-01 Controls, Governor Spring, Ignition  
122436-0238-01 Controls, Governor Spring, Ignition  
122437-0156-01 Controls, Governor Spring, Ignition  
122437-0163-01 Controls, Governor Spring, Ignition  
122437-0163-B8 Controls, Governor Spring, Ignition  
122437-0163-E8 Controls, Governor Spring, Ignition

Page 5 of 10

122437-0205-01 Controls, Governor Spring, Ignition  
122437-0228-01 Controls, Governor Spring, Ignition  
122452-0202-B8 Controls, Governor Spring, Ignition  
122462-0111-01 Controls, Governor Spring, Ignition  
122462-0111-B1 Controls, Governor Spring, Ignition  
122462-0111-B8 Controls, Governor Spring, Ignition  
122462-0111-E1 Controls, Governor Spring, Ignition  
122462-0111-E8 Controls, Governor Spring, Ignition  
122462-0126-B8 Controls, Governor Spring, Ignition  
122462-0126-E8 Controls, Governor Spring, Ignition  
122462-0130-01 Controls, Governor Spring, Ignition  
122462-0130-B8 Controls, Governor Spring, Ignition  
122462-0130-E8 Controls, Governor Spring, Ignition  
122462-0134-01 Controls, Governor Spring, Ignition  
122462-0181-01 Controls, Governor Spring, Ignition  
122462-0208-01 Controls, Governor Spring, Ignition  
122462-0235-01 Controls, Governor Spring, Ignition  
122466-0154-B8 Controls, Governor Spring, Ignition  
122466-0154-E8 Controls, Governor Spring, Ignition  
122466-0190-01 Controls, Governor Spring, Ignition  
122467-0121-01 Controls, Governor Spring, Ignition  
122467-0121-B8 Controls, Governor Spring, Ignition  
122467-0121-E8 Controls, Governor Spring, Ignition  
122467-0201-01 Controls, Governor Spring, Ignition  
122467-0236-01 Controls, Governor Spring, Ignition  
123436-0177-E1 Controls, Governor Springs, Ignition  
12E312-0100-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12E394-0018-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12E394-0110-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter

Page 6 of 10

12E396-0111-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12E494-0110-E1 Controls, Governor Springs, Ignition  
15B194-0018-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter

15B194-0110-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15B196-0111-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15C114-0131-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15C114-0142-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15C194-0018-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
20A414-0111-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A414-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A414-0114-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A414-0118-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20B414-0121-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E214-0110-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E214-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E214-0359-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20G412-0100-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20G414-0017-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20G414-0019-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20G414-0111-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20G414-0222-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20G414-0368-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20G416-0110-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M114-0139-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M114-0140-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M214-0111-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M214-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M214-0114-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M214-0118-E1 Alternator, Electric Starter, Fuel Supply, Ignition

Page 7 of 10

20M214-0131-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M214-0132-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-0127-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-0130-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-0131-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-0132-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M414-0110-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M414-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M414-0122-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M414-0359-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21A414-0112-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21A414-0115-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21A414-0117-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21A414-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21A414-0133-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21A414-0135-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21A414-0166-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21A414-0168-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21A414-0215-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21A416-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21B414-0019-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21B414-0117-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C214-0110-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C214-0111-E1 Alternator, Electric Starter, Fuel Supply, Ignition

21C214-0114-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C214-0129-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C214-0131-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C214-0134-E1 Alternator, Electric Starter, Fuel Supply, Ignition

Page 8 of 10

21C214-0135-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C314-0116-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C314-0118-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0110-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0111-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0114-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0116-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0117-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0129-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0131-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0134-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0135-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0139-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M314-0118-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M314-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M314-0122-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0112-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0115-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0117-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0121-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0133-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0135-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0166-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0168-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0170-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0215-E1 Alternator, Electric Starter, Fuel Supply, Ignition

Page 9 of 10