



Note: Unless you are sure of your part number, please email us your model & spec number so we can ensure you get the right part and that there are no further modifications required.

Parts look up sometimes depends on a variety of issues (such as date code or other markings) The list below is derived from a "where used" search of either the part in question or a superseded (prior) part and can not take into account potential part variations that depend on other factors (such as date code) Unless you are 100% sure this is your part you should verify by looking the part up at either **www.smallenginepartssuppliers.com**

www.smallenginepartssuppliers.com

No claim of wrong part received will be honored based on the information presented in this file. You must have a WRITTEN (via email) recommendation to claim wrong part received.

The alternator or regulator below can be found at the following page:

http://www.smallenginesuppliers.com/shop/html/pages/Briggs_Stratton_ignition_coil.html

Where Used: 698315

Model Name Diagram

122336-0116-B7 Controls, Governor Spring, Ignition
122336-0116-B8 Controls, Governor Spring, Ignition
122336-4238-B7 Controls, Governor Spring, Ignition
122336-4238-B8 Controls, Governor Spring, Ignition
122432-0033-E8 Controls, Governor Spring, Ignition
122432-0036-E8 Controls, Governor Spring, Ignition
122432-0100-B8 Controls, Governor Spring, Ignition
122432-0100-E8 Controls, Governor Spring, Ignition
122432-0110-01 Controls, Governor Spring, Ignition
122432-0110-B1 Controls, Governor Spring, Ignition
122432-0110-B8 Controls, Governor Spring, Ignition
122432-0110-E1 Controls, Governor Spring, Ignition
122432-0110-E8 Controls, Governor Spring, Ignition
122432-0112-01 Controls, Governor Spring, Ignition
122432-0112-B1 Controls, Governor Spring, Ignition
122432-0112-B8 Controls, Governor Spring, Ignition
122432-0112-E1 Controls, Governor Spring, Ignition
122432-0112-E8 Controls, Governor Spring, Ignition
122432-0113-01 Controls, Governor Spring, Ignition
122432-0113-B1 Controls, Governor Spring, Ignition
122432-0113-B8 Controls, Governor Spring, Ignition
122432-0113-E1 Controls, Governor Spring, Ignition
122432-0113-E8 Controls, Governor Spring, Ignition
122432-0114-01 Controls, Governor Spring, Ignition
122432-0114-B1 Controls, Governor Spring, Ignition

122432-0114-E1 Controls, Governor Spring, Ignition
122432-0114-E8 Controls, Governor Spring, Ignition

Page 1 of 22

122432-0115-01 Controls, Governor Spring, Ignition
122432-0115-B1 Controls, Governor Spring, Ignition
122432-0115-B8 Controls, Governor Spring, Ignition
122432-0115-E1 Controls, Governor Spring, Ignition
122432-0115-E8 Controls, Governor Spring, Ignition
122432-0118-01 Controls, Governor Spring, Ignition
122432-0118-B1 Controls, Governor Spring, Ignition
122432-0118-B8 Controls, Governor Spring, Ignition
122432-0118-E1 Controls, Governor Spring, Ignition
122432-0118-E8 Controls, Governor Spring, Ignition
122432-0119-01 Controls, Governor Spring, Ignition
122432-0119-B1 Controls, Governor Spring, Ignition
122432-0119-B8 Controls, Governor Spring, Ignition
122432-0119-E1 Controls, Governor Spring, Ignition
122432-0119-E8 Controls, Governor Spring, Ignition
122432-0120-01 Controls, Governor Spring, Ignition
122432-0120-B1 Controls, Governor Spring, Ignition
122432-0120-B8 Controls, Governor Spring, Ignition
122432-0120-E1 Controls, Governor Spring, Ignition
122432-0120-E8 Controls, Governor Spring, Ignition
122432-0122-B1 Controls, Governor Spring, Ignition
122432-0122-B8 Controls, Governor Spring, Ignition
122432-0122-E1 Controls, Governor Spring, Ignition
122432-0122-E8 Controls, Governor Spring, Ignition
122432-0123-B1 Controls, Governor Spring, Ignition
122432-0123-B8 Controls, Governor Spring, Ignition
122432-0123-E1 Controls, Governor Spring, Ignition
122432-0123-E8 Controls, Governor Spring, Ignition
122432-0124-B1 Controls, Governor Spring, Ignition

Page 2 of 22

122432-0124-B8 Controls, Governor Spring, Ignition
122432-0124-E1 Controls, Governor Spring, Ignition
122432-0124-E8 Controls, Governor Spring, Ignition
122432-0125-B1 Controls, Governor Spring, Ignition
122432-0125-B8 Controls, Governor Spring, Ignition
122432-0125-E1 Controls, Governor Spring, Ignition
122432-0125-E8 Controls, Governor Spring, Ignition
122432-0127-01 Controls, Governor Spring, Ignition
122432-0127-B8 Controls, Governor Spring, Ignition
122432-0127-E8 Controls, Governor Spring, Ignition
122432-0128-B8 Controls, Governor Spring, Ignition
122432-0128-E8 Controls, Governor Spring, Ignition
122432-0129-B1 Controls, Governor Spring, Ignition
122432-0129-B8 Controls, Governor Spring, Ignition
122432-0129-E1 Controls, Governor Spring, Ignition
122432-0129-E8 Controls, Governor Spring, Ignition
122432-0132-B8 Controls, Governor Spring, Ignition
122432-0132-E8 Controls, Governor Spring, Ignition
122432-0135-01 Controls, Governor Spring, Ignition

122432-0136-B8 Controls, Governor Spring, Ignition
122432-0136-E8 Controls, Governor Spring, Ignition
122432-0137-01 Controls, Governor Spring, Ignition
122432-0138-B8 Controls, Governor Spring, Ignition
122432-0138-E8 Controls, Governor Spring, Ignition
122432-0139-B8 Controls, Governor Spring, Ignition
122432-0139-E8 Controls, Governor Spring, Ignition
122432-0146-01 Controls, Governor Spring, Ignition
122432-0146-B8 Controls, Governor Spring, Ignition
122432-0146-E8 Controls, Governor Spring, Ignition

Page 3 of 22

122432-0151-01 Controls, Governor Spring, Ignition
122432-0152-B8 Controls, Governor Spring, Ignition
122432-0152-E8 Controls, Governor Spring, Ignition
122432-0157-B8 Controls, Governor Spring, Ignition
122432-0157-E8 Controls, Governor Spring, Ignition
122432-0159-01 Controls, Governor Spring, Ignition
122432-0160-B8 Controls, Governor Spring, Ignition
122432-0160-E8 Controls, Governor Spring, Ignition
122432-0162-01 Controls, Governor Spring, Ignition
122432-0167-B8 Controls, Governor Spring, Ignition
122432-0167-E8 Controls, Governor Spring, Ignition
122432-0168-01 Controls, Governor Spring, Ignition
122432-0169-01 Controls, Governor Spring, Ignition
122432-0170-01 Controls, Governor Spring, Ignition
122432-0173-B8 Controls, Governor Spring, Ignition
122432-0173-E8 Controls, Governor Spring, Ignition
122432-0174-B8 Controls, Governor Spring, Ignition
122432-0174-E8 Controls, Governor Spring, Ignition
122432-0176-01 Controls, Governor Spring, Ignition
122432-0178-B8 Controls, Governor Spring, Ignition
122432-0178-E8 Controls, Governor Spring, Ignition
122432-0180-01 Controls, Governor Spring, Ignition
122432-0182-01 Controls, Governor Spring, Ignition
122432-0187-B8 Controls, Governor Spring, Ignition
122432-0188-B8 Controls, Governor Spring, Ignition
122432-0194-B8 Controls, Governor Spring, Ignition
122432-0195-B8 Controls, Governor Spring, Ignition
122432-0196-B8 Controls, Governor Spring, Ignition
122432-0197-B8 Controls, Governor Spring, Ignition

Page 4 of 22

122432-0199-B8 Controls, Governor Spring, Ignition
122432-0200-B8 Controls, Governor Spring, Ignition
122432-0203-01 Controls, Governor Spring, Ignition
122432-0207-01 Controls, Governor Spring, Ignition
122432-0210-01 Controls, Governor Spring, Ignition
122432-0211-B8 Controls, Governor Spring, Ignition
122432-0211-E8 Controls, Governor Spring, Ignition
122432-0214-01 Controls, Governor Spring, Ignition
122432-0223-01 Controls, Governor Spring, Ignition
122432-0224-01 Controls, Governor Spring, Ignition
122432-0225-01 Controls, Governor Spring, Ignition

122432-0226-01 Controls, Governor Spring, Ignition
122432-0227-01 Controls, Governor Spring, Ignition
122432-0234-01 Controls, Governor Spring, Ignition
122432-0237-01 Controls, Governor Spring, Ignition
122432-0239-01 Controls, Governor Spring, Ignition
122432-0240-01 Controls, Governor Spring, Ignition
122432-0241-01 Controls, Governor Spring, Ignition
122432-0242-01 Controls, Governor Spring, Ignition
122432-0249-01 Controls, Governor Spring, Ignition
122432-0250-B8 Controls, Governor Spring, Ignition
122432-0252-B8 Controls, Governor Spring, Ignition
122435-0243-01 Controls, Governor Spring, Ignition
122436-0230-01 Controls, Governor Spring, Ignition
122436-0238-01 Controls, Governor Spring, Ignition
122437-0150-B8 Controls, Governor Spring, Ignition
122437-0150-E8 Controls, Governor Spring, Ignition
122437-0156-01 Controls, Governor Spring, Ignition
122437-0163-01 Controls, Governor Spring, Ignition

Page 5 of 22

122437-0163-B8 Controls, Governor Spring, Ignition
122437-0163-E8 Controls, Governor Spring, Ignition
122437-0205-01 Controls, Governor Spring, Ignition
122437-0228-01 Controls, Governor Spring, Ignition
122452-0202-B8 Controls, Governor Spring, Ignition
122462-0111-01 Controls, Governor Spring, Ignition
122462-0111-B1 Controls, Governor Spring, Ignition
122462-0111-B8 Controls, Governor Spring, Ignition
122462-0111-E1 Controls, Governor Spring, Ignition
122462-0111-E8 Controls, Governor Spring, Ignition
122462-0126-B8 Controls, Governor Spring, Ignition
122462-0126-E8 Controls, Governor Spring, Ignition
122462-0130-01 Controls, Governor Spring, Ignition
122462-0130-B8 Controls, Governor Spring, Ignition
122462-0130-E8 Controls, Governor Spring, Ignition
122462-0134-01 Controls, Governor Spring, Ignition
122462-0181-01 Controls, Governor Spring, Ignition
122462-0208-01 Controls, Governor Spring, Ignition
122462-0235-01 Controls, Governor Spring, Ignition
122466-0154-B8 Controls, Governor Spring, Ignition
122466-0154-E8 Controls, Governor Spring, Ignition
122466-0190-01 Controls, Governor Spring, Ignition
122467-0121-01 Controls, Governor Spring, Ignition
122467-0121-B8 Controls, Governor Spring, Ignition
122467-0121-E8 Controls, Governor Spring, Ignition
122467-0201-01 Controls, Governor Spring, Ignition
122467-0236-01 Controls, Governor Spring, Ignition
123436-0177-E1 Controls, Governor Springs, Ignition
12E312-0100-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter

Page 6 of 22

12E314-0275-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
12E394-0018-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
12E394-0110-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter

15C114-0131-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C114-0137-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C114-0142-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C114-0939-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter

Page 8 of 22

15C114-0939-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C114-1235-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C114-1240-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C114-1463-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C114-1464-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C114-1465-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C114-1468-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C114-8240-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C114-8939-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C133-0130-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C134-0023-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C134-0127-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C134-0128-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C134-0129-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C134-0132-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C134-0140-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C134-0141-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C134-0143-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C134-0145-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C134-0146-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15C194-0018-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D102-0111-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D102-0111-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D104-0022-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D104-0112-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D104-0112-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D104-0113-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D112-0006-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D112-0007-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter

Page 9 of 22

15D112-0007-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D114-0017-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D114-0020-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D114-0918-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D114-0918-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D134-0023-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
15D194-0018-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter
20A414-0111-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20A414-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20A414-0114-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20A414-0118-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20B414-0369-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20E214-0110-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20E214-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20E214-0359-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20E337-0110-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20G414-0017-E1 Alternator, Electric Starter, Fuel Supply, Ignition

20G414-0111-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20G416-0110-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M212-0007-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M212-0009-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M212-0100-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M213-0123-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0111-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0114-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0115-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0116-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0117-E1 Alternator, Electric Starter, Fuel Supply, Ignition

Page 10 of 22

20M214-0118-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0120-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0124-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0125-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0131-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0132-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0375-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0539-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0539-E2 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0737-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0919-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-0919-E2 Alternator, Electric Starter, Fuel Supply, Ignition
20M214-1356-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M314-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M314-0127-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M314-0130-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M314-0131-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M314-0132-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M414-0110-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M414-0111-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M414-0112-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M414-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M414-0118-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M414-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M414-0122-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M414-0359-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M414-0560-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M414-0560-E2 Alternator, Electric Starter, Fuel Supply, Ignition

Page 11 of 22

20M414-1360-E1 Alternator, Electric Starter, Fuel Supply, Ignition
20M414-1509-E1 Alternator, Electric Starter, Fuel Supply, Ignition
217902-0015-E1 Alternator, Electric Starter, Ignition, Rewind Starter
217902-0015-G1 Alternator, Electric Starter, Ignition, Rewind Starter
217902-0016-E1 Alternator, Electric Starter, Ignition, Rewind Starter
217902-0016-G1 Alternator, Electric Starter, Ignition, Rewind Starter
217902-0020-B1 Alternator, Electric Starter, Ignition, Rewind Starter
217902-0020-B9 Alternator, Electric Starter, Ignition, Rewind Starter
217902-0020-E1 Alternator, Electric Starter, Ignition, Rewind Starter

21A414-0115-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21A414-0117-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21A414-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21A414-0133-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21A414-0135-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21A414-0166-E1 Alternator, Electric Starter, Fuel Supply, Ignition

Page 15 of 22

21A414-0168-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21A414-0215-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21A416-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21A976-0176-E1 Alternator
21B414-0019-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21B414-0117-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21B902-0015-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B902-0015-G1 Alternator, Electric Starter, Ignition, Rewind Starter
21B902-0022-B1 Alternator, Electric Starter, Ignition, Rewind Starter
21B902-0022-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B902-0022-E9 Alternator, Electric Starter, Ignition, Rewind Starter
21B906-0020-B1 Alternator, Electric Starter, Ignition, Rewind Starter
21B906-0020-B9 Alternator, Electric Starter, Ignition, Rewind Starter
21B906-0020-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B906-0020-E9 Alternator, Electric Starter, Ignition, Rewind Starter
21B906-0121-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B906-0192-B1 Alternator, Electric Starter, Ignition, Rewind Starter
21B906-0192-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0026-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0026-G1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0028-B1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0028-B9 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0028-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0028-E9 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0029-B1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0029-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0029-G1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0131-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0132-E1 Alternator, Electric Starter, Ignition, Rewind Starter

Page 16 of 22

21B907-0137-B1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0137-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0139-B1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0139-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0140-B1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0140-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0153-G1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0154-B1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0159-B1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0164-B1 Alternator, Electric Starter, Ignition, Rewind Starter
21B907-0203-G1 Alternator, Electric Starter, Ignition, Rewind Starter
21B972-0016-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B972-0016-G1 Alternator, Electric Starter, Ignition, Rewind Starter
21B972-0116-E1 Alternator, Electric Starter, Ignition, Rewind Starter
21B972-0117-B1 Alternator, Electric Starter, Ignition, Rewind Starter

Page 20 of 22

21M314-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M314-0122-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M412-0100-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0017-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0019-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0112-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0115-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0117-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0120-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0121-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0133-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0134-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0135-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0136-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0166-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0168-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0170-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0215-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0519-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0540-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0701-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-0941-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-1182-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-1182-E2 Alternator, Electric Starter, Fuel Supply, Ignition
21M414-1510-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21P214-0017-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21P214-0019-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21P214-0120-E1 Alternator, Electric Starter, Fuel Supply, Ignition

Page 21 of 22

21P214-0121-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21P214-0126-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21P214-0738-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21P214-0942-E1 Alternator, Electric Starter, Fuel Supply, Ignition
21P214-1181-E1 Alternator, Electric Starter, Fuel Supply, Ignition
280H06-0118-E1 Alternator, Controls, Electric Starter, Governor Spring, Ignition
28AH76-0113-E1 Alternator, Controls, Electric Starter, Governor Spring, Ignition
28BH76-0114-E1 Alternator, Controls, Electric Starter, Governor Spring, Ignition

Page 22 of 22