



**Note: Unless you are sure of your part number, please email us your model & spec number so we can ensure you get the right part and that there are no further modifications required.**

Parts look up sometimes depends on a variety of issues (such as date code or other markings) The list below is derived from a "where used" search of either the part in question or a superseded (prior) part and can not take into account potential part variations that depend on other factors (such as date code) Unless you are 100% sure this is your part you should verify by looking the part up at either **[www.smallenginepartssuppliers.com](http://www.smallenginepartssuppliers.com)**

[www.smallenginepartssuppliers.com](http://www.smallenginepartssuppliers.com)

No claim of wrong part received will be honored based on the information presented in this file. You must have a WRITTEN (via email) recommendation to claim wrong part received.

The alternator or regulator below can be found at the following page:

[http://www.smallenginesuppliers.com/shop/html/pages/Briggs\\_Stratton\\_ignition\\_coil.html](http://www.smallenginesuppliers.com/shop/html/pages/Briggs_Stratton_ignition_coil.html)

Where Used: 793640

Model Name Diagram

Controls, Electric Starter, Governor Spring, Ignition

120317-0121-B1 Controls, Electric Starter, Governor Spring, Ignition

120317-0121-B8 Controls, Electric Starter, Governor Spring, Ignition

120317-0121-E1 Controls, Electric Starter, Governor Spring, Ignition

121317-0121-B1 Controls, Electric Starter, Governor Springs, Ignition

121317-0121-B8 Controls, Electric Starter, Governor Springs, Ignition

121317-0121-E1 Controls, Electric Starter, Governor Springs, Ignition

121317-0180-B1 Controls, Electric Starter, Governor Springs, Ignition

121317-0180-B8 Controls, Electric Starter, Governor Springs, Ignition

121317-0180-E1 Controls, Electric Starter, Governor Springs, Ignition

121317-0247-B1 Controls, Electric Starter, Governor Springs, Ignition

121317-0247-B8 Controls, Electric Starter, Governor Springs, Ignition

121317-0247-E1 Controls, Electric Starter, Governor Springs, Ignition

121337-0050-B1 Controls, Electric Starter, Governor Springs, Ignition

121337-0050-B8 Controls, Electric Starter, Governor Springs, Ignition

121337-0050-E1 Controls, Electric Starter, Governor Springs, Ignition

121337-0196-B1 Controls, Electric Starter, Governor Springs, Ignition

121337-0196-E1 Controls, Electric Starter, Governor Springs, Ignition

121337-0250-B1 Controls, Electric Starter, Governor Springs, Ignition

121337-0250-B8 Controls, Electric Starter, Governor Springs, Ignition

121337-0250-E1 Controls, Electric Starter, Governor Springs, Ignition

121337-0356-B1 Controls, Electric Starter, Governor Springs, Ignition

121337-0356-B8 Controls, Electric Starter, Governor Springs, Ignition

121337-0550-B8 Controls, Electric Starter, Governor Springs, Ignition

122017-0374-B1 Controls, Governor Spring, Ignition

122017-0374-B8 Controls, Governor Spring, Ignition  
122017-0374-E1 Controls, Governor Spring, Ignition

Page 1 of 12

122337-4185-B8 Controls, Governor Spring, Ignition  
122437-0150-B8 Controls, Governor Spring, Ignition  
122437-0150-E8 Controls, Governor Spring, Ignition  
123337-0050-B1 Controls, Electric Starter, Governor Spring, Ignition  
123337-0050-E1 Controls, Electric Starter, Governor Spring, Ignition  
123337-0119-B1 Controls, Electric Starter, Governor Spring, Ignition  
123337-0119-E1 Controls, Electric Starter, Governor Spring, Ignition  
123337-0170-B1 Controls, Electric Starter, Governor Spring, Ignition  
123337-0170-B8 Controls, Electric Starter, Governor Spring, Ignition  
123337-0170-E1 Controls, Electric Starter, Governor Spring, Ignition  
123337-0170-E8 Controls, Electric Starter, Governor Spring, Ignition  
123337-0176-B1 Controls, Electric Starter, Governor Spring, Ignition  
123337-0176-E1 Controls, Electric Starter, Governor Spring, Ignition  
123337-0178-B1 Controls, Electric Starter, Governor Spring, Ignition  
123337-0178-E1 Controls, Electric Starter, Governor Spring, Ignition  
123337-0181-B1 Controls, Electric Starter, Governor Spring, Ignition  
123337-0185-B8 Controls, Electric Starter, Governor Spring, Ignition  
123337-0250-B1 Controls, Electric Starter, Governor Spring, Ignition  
123337-0250-E1 Controls, Electric Starter, Governor Spring, Ignition  
126317-0146-B2 Controls, Electric Starter, Governor Springs, Ignition  
126317-0146-E2 Controls, Electric Starter, Governor Springs, Ignition  
128337-0050-E1 Controls, Fuel Supply, Governor Spring, Ignition  
12A112-2134-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A114-0113-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A114-0116-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A114-0130-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A114-0132-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A114-1204-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A114-1354-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter

Page 2 of 12

12A114-8354-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A117-0114-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A314-0120-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A314-0121-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A316-0119-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12C314-0131-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12C314-0131-E3 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12C314-0207-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12C316-0279-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12D102-0132-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12D103-0131-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12D103-0139-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12D103-0140-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12D112-0007-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12D112-0008-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12D112-0009-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12D113-0017-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12D113-0100-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12D114-0112-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter



13H332-0111-B8 Alternator, Ignition  
13H332-0112-B8 Alternator, Ignition  
13H332-0113-B8 Alternator, Ignition  
13H332-0114-B8 Alternator, Ignition  
13H332-0115-B8 Alternator, Ignition  
13H332-0116-B8 Alternator, Ignition  
13H332-0120-B8 Alternator, Ignition  
13H332-0124-B1 Alternator, Ignition  
13H332-0125-B8 Alternator, Ignition  
13H332-0126-B8 Alternator, Ignition  
13H332-0127-B8 Alternator, Ignition  
13H332-0130-B8 Alternator, Ignition  
13H332-0132-B8 Alternator, Ignition  
13H332-0133-B8 Alternator, Ignition  
13H332-0134-B8 Alternator, Ignition  
13H332-0137-B8 Alternator, Ignition  
13H332-0138-B8 Alternator, Ignition  
13H332-0139-B8 Alternator, Ignition

Page 5 of 12

13H332-0140-B8 Alternator, Ignition  
13H332-0141-B8 Alternator, Ignition  
13H332-0142-B8 Alternator, Ignition  
13H332-0144-B8 Alternator, Ignition  
13H332-0146-B8 Alternator, Ignition  
13H332-0149-B8 Alternator, Ignition  
13H332-0153-B8 Alternator, Ignition  
13H332-0154-B8 Alternator, Ignition  
13H332-0156-B8 Alternator, Ignition  
13H332-0157-B8 Alternator, Ignition  
13H332-0159-B8 Alternator, Ignition  
13H336-0131-B8 Alternator, Ignition  
13H337-0117-B8 Alternator, Ignition  
13H337-0118-B8 Alternator, Ignition  
13H337-0128-B8 Alternator, Ignition  
13H352-0119-B8 Alternator, Ignition  
13H352-0136-B8 Alternator, Ignition  
13H362-0121-B8 Alternator, Ignition  
13H362-0143-B8 Alternator, Ignition  
13H362-0145-B8 Alternator, Ignition  
13H362-0152-B8 Alternator, Ignition  
150212-0008-B8 Blower Housing, Electric Starter, Flywheel, Rewind Starter  
150212-0115-B8 Blower Housing, Electric Starter, Flywheel, Rewind Starter  
150212-0115-E1 Blower Housing, Electric Starter, Flywheel, Rewind Starter  
150212-0119-E9 Blower Housing, Electric Starter, Flywheel, Rewind Starter  
150212-0120-B8 Blower Housing, Electric Starter, Flywheel, Rewind Starter  
150212-0120-E9 Blower Housing, Electric Starter, Flywheel, Rewind Starter  
150212-0121-E1 Blower Housing, Electric Starter, Flywheel, Rewind Starter  
150212-0122-B8 Blower Housing, Electric Starter, Flywheel, Rewind Starter

Page 6 of 12

150212-0122-E9 Blower Housing, Electric Starter, Flywheel, Rewind Starter  
150212-0124-B8 Blower Housing, Electric Starter, Flywheel, Rewind Starter  
150212-0125-B8 Blower Housing, Electric Starter, Flywheel, Rewind Starter





20M314-0120-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-0123-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-0127-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-0349-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-0644-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-0695-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-0699-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-0927-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-0949-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-1185-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-1370-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M314-1370-E2 Alternator, Electric Starter, Fuel Supply, Ignition

Page 10 of 12

20M414-0111-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M414-0112-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M414-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20M414-0118-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20P214-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20P214-0123-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20P214-0125-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20P214-0369-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20P214-0698-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20P214-0929-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20P414-0111-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M113-1366-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M113-1366-E2 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0124-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0125-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0129-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0130-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0370-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0370-E2 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0538-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0538-E2 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0543-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0647-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0731-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0923-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0923-E2 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0936-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-0943-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M114-1367-E1 Alternator, Electric Starter, Fuel Supply, Ignition

Page 11 of 12

21M114-1367-E2 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0112-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0115-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0132-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0530-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M214-0553-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0136-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0540-E1 Alternator, Electric Starter, Fuel Supply, Ignition

21M414-0701-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21M414-0941-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21P214-0120-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21P214-0126-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21P214-0738-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21P214-0942-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21Z114-0110-E1 Alternator, Electric Starter, Fuel Supply, Ignition

Page 12 of 12

Where Used: 791743

Model Name Diagram

12A312-0100-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A312-0115-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A312-0115-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A312-0118-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A313-0116-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A316-0917-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12A316-0917-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
12Z314-0110-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15A104-0545-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15A104-0545-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15A112-0006-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15A112-0007-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15A114-0121-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15A114-0121-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15A114-0122-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15A114-0123-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15A114-0124-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15A114-0124-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15A114-0540-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15A114-1204-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15A193-0118-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15B194-0018-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15B194-0110-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15B196-0111-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15C104-0126-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15C104-0612-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15C114-0117-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter

Page 1 of 4

15C114-0118-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15C114-0123-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15C133-0130-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15C134-0127-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15D102-0111-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15D102-0111-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15D104-0112-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15D104-0112-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15D104-0113-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15D112-0006-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15D112-0007-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15D112-0007-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15D114-0017-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15D114-0020-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter



15D194-0018-E8 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15R114-1204-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
15Z114-0111-E1 Controls, Electric Starter, Governor Spring, Ignition, Rewind Starter  
20A114-0120-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A114-0131-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A114-0132-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A114-0133-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A114-0134-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A114-0363-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A114-0537-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A114-0537-E2 Alternator, Electric Starter, Fuel Supply, Ignition  
20A114-0541-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A114-0650-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A114-0730-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A114-0733-E1 Alternator, Electric Starter, Fuel Supply, Ignition

Page 2 of 4

20A114-0922-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A414-0115-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A414-0116-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A414-0117-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A414-0119-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A414-0120-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A414-0348-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A414-0353-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20A414-0737-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20B414-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20B414-0698-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20C114-0269-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20C114-0270-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E114-0110-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E114-0112-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E114-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E114-0114-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E114-0120-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E114-0121-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E114-0349-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E114-0644-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E114-0695-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E114-0699-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E214-0111-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E214-0112-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E214-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E214-0118-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E214-0358-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
20E414-0162-E1 Alternator, Electric Starter, Fuel Supply, Ignition

Page 3 of 4

20X314-0110-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21A414-0136-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21A414-0540-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21A414-0701-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21B414-0739-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C114-0122-E1 Alternator, Electric Starter, Fuel Supply, Ignition

21C114-0123-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C114-0370-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C114-0370-E2 Alternator, Electric Starter, Fuel Supply, Ignition  
21C114-0538-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C114-0538-E2 Alternator, Electric Starter, Fuel Supply, Ignition  
21C114-0543-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C114-0647-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C114-0731-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C114-0923-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C114-0936-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C214-0112-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C214-0113-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C214-0115-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C214-0132-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C214-0530-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C214-0553-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
21C314-0738-E1 Alternator, Electric Starter, Fuel Supply, Ignition  
Page 4 of 4