



Note: Unless you are sure of your part number, please email us your model & spec number so we can ensure you get the right part and that there are no further modifications required.

Parts look up sometimes depends on a variety of issues (such as date code or other markings) The list below is derived from a "where used" search of either the part in question or a superseded (prior) part and can not take into account potential part variations that depend on other factors (such as date code) Unless you are 100% sure this is your part you should verify by looking the part up at either **www.smallenginepartssuppliers.com**

www.smallenginepartssuppliers.com

No claim of wrong part received will be honored based on the information presented in this file. You must have a WRITTEN (via email) recommendation to claim wrong part received.

The alternator or regulator below can be found at the following page:

http://www.smallenginesuppliers.com/shop/html/pages/Briggs_Stratton_ignition_coil.html

Where Used: 841588

Model Name Diagram

356442-0065-B1 Alternator, Ignition
356442-0065-E1 Alternator, Ignition
356442-0065-E9 Alternator, Ignition
356442-0119-E1 Alternator, Ignition
356442-0119-G1 Alternator, Ignition
356442-0126-E1 Alternator, Ignition
356442-0126-G1 Alternator, Ignition
356442-0127-B1 Alternator, Ignition
356442-0127-E1 Alternator, Ignition
356442-0127-E9 Alternator, Ignition
356442-0128-B1 Alternator, Ignition
356442-0128-E1 Alternator, Ignition
356442-0128-E9 Alternator, Ignition
356442-0186-B1 Alternator, Ignition
356442-0186-E1 Alternator, Ignition
356442-0186-E9 Alternator, Ignition
356445-0173-E1 Alternator, Ignition
356447-0075-E1 Alternator, Ignition
356447-0075-G1 Alternator, Ignition
356447-0078-E1 Alternator, Ignition
356447-0078-G1 Alternator, Ignition
356447-0079-E1 Alternator, Ignition
356447-0079-G1 Alternator, Ignition
356447-0096-B1 Alternator, Ignition
356447-0096-E1 Alternator, Ignition

356447-0096-E9 Alternator, Ignition
356447-0114-E1 Alternator, Ignition

Page 1 of 6

356447-0114-G1 Alternator, Ignition
356447-0115-E1 Alternator, Ignition
356447-0115-G1 Alternator, Ignition
356447-0117-E1 Alternator, Ignition
356447-0117-G1 Alternator, Ignition
356447-0118-E1 Alternator, Ignition
356447-0118-G1 Alternator, Ignition
356447-0121-E1 Alternator, Ignition
356447-0121-G1 Alternator, Ignition
356447-0122-B1 Alternator, Ignition
356447-0122-E1 Alternator, Ignition
356447-0122-E9 Alternator, Ignition
356447-0123-E1 Alternator, Ignition
356447-0123-G1 Alternator, Ignition
356447-0124-E1 Alternator, Ignition
356447-0124-G1 Alternator, Ignition
356447-0125-B1 Alternator, Ignition
356447-0125-E1 Alternator, Ignition
356447-0125-E9 Alternator, Ignition
356447-0129-E2 Alternator, Ignition
356447-0129-G2 Alternator, Ignition
356447-0133-E1 Alternator, Ignition
356447-0133-G1 Alternator, Ignition
356447-0135-E1 Alternator, Ignition
356447-0135-G1 Alternator, Ignition
356447-0139-E1 Alternator, Ignition
356447-0139-G1 Alternator, Ignition
356447-0140-E1 Alternator, Ignition
356447-0140-E2 Alternator, Ignition

Page 2 of 6

356447-0140-G1 Alternator, Ignition
356447-0140-G2 Alternator, Ignition
356447-0141-E1 Alternator, Ignition
356447-0141-G1 Alternator, Ignition
356447-0142-E1 Alternator, Ignition
356447-0142-G1 Alternator, Ignition
356447-0145-E1 Alternator, Ignition
356447-0145-G1 Alternator, Ignition
356447-0148-B1 Alternator, Ignition
356447-0148-E1 Alternator, Ignition
356447-0148-E9 Alternator, Ignition
356447-0149-E1 Alternator, Ignition
356447-0149-G1 Alternator, Ignition
356447-0150-E1 Alternator, Ignition
356447-0150-G1 Alternator, Ignition
356447-0152-E1 Alternator, Ignition
356447-0154-E1 Alternator, Ignition
356447-0154-G1 Alternator, Ignition
356447-0155-E1 Alternator, Ignition

356447-0155-G1 Alternator, Ignition
356447-0156-E1 Alternator, Ignition
356447-0157-E1 Alternator, Ignition
356447-0157-G1 Alternator, Ignition
356447-0158-E1 Alternator, Ignition
356447-0158-G1 Alternator, Ignition
356447-0159-E1 Alternator, Ignition
356447-0159-G1 Alternator, Ignition
356447-0160-B1 Alternator, Ignition
356447-0160-E1 Alternator, Ignition

Page 3 of 6

356447-0160-E9 Alternator, Ignition
356447-0161-E1 Alternator, Ignition
356447-0161-G1 Alternator, Ignition
356447-0162-E1 Alternator, Ignition
356447-0162-G1 Alternator, Ignition
356447-0163-E1 Alternator, Ignition
356447-0163-G1 Alternator, Ignition
356447-0164-E1 Alternator, Ignition
356447-0164-G1 Alternator, Ignition
356447-0168-B1 Alternator, Ignition
356447-0168-E1 Alternator, Ignition
356447-0168-E9 Alternator, Ignition
356447-0169-E1 Alternator, Ignition
356447-0169-G1 Alternator, Ignition
356447-0171-E1 Alternator, Ignition
356447-0171-G1 Alternator, Ignition
356447-0172-E1 Alternator, Ignition
356447-0172-G1 Alternator, Ignition
356447-0174-E1 Alternator, Ignition
356447-0174-G1 Alternator, Ignition
356447-0177-E1 Alternator, Ignition
356447-0177-G1 Alternator, Ignition
356447-0179-E1 Alternator, Ignition
356447-0179-G1 Alternator, Ignition
356447-0180-B1 Alternator, Ignition
356447-0180-E1 Alternator, Ignition
356447-0180-E9 Alternator, Ignition
356447-0183-B1 Alternator, Ignition
356447-0183-E1 Alternator, Ignition

Page 4 of 6

356447-0183-E9 Alternator, Ignition
356447-0189-E1 Alternator, Ignition
356447-0189-G1 Alternator, Ignition
356447-0191-B1 Alternator, Ignition
356447-0191-E1 Alternator, Ignition
356447-0191-E9 Alternator, Ignition
356447-0194-E1 Alternator, Ignition
356447-0194-G1 Alternator, Ignition
356447-0197-E1 Alternator, Ignition
356447-0197-G1 Alternator, Ignition
356447-0199-E1 Alternator, Ignition

356447-0199-G1 Alternator, Ignition
356447-0200-E1 Alternator, Ignition
356447-0200-G1 Alternator, Ignition
356447-0201-E1 Alternator, Ignition
356447-0201-G1 Alternator, Ignition
356447-0202-E1 Alternator, Ignition
356447-0202-G1 Alternator, Ignition
356447-0203-E1 Alternator, Ignition
356447-0203-G1 Alternator, Ignition
356447-0206-B1 Alternator, Ignition
356447-0206-E1 Alternator, Ignition
356447-0206-E9 Alternator, Ignition
356447-0215-E1 Alternator, Ignition
356447-0215-G1 Alternator, Ignition
356447-0216-E1 Alternator, Ignition
356447-0216-G1 Alternator, Ignition
356447-0217-E1 Alternator, Ignition
356447-0217-G1 Alternator, Ignition

Page 5 of 6

356447-0218-E1 Alternator, Ignition
356447-0218-E9 Alternator, Ignition
356447-0219-E1 Alternator, Ignition
356447-0219-G1 Alternator, Ignition
356447-0220-E1 Alternator, Ignition
356447-0220-G1 Alternator, Ignition
356447-0331-E1 Alternator, Ignition
356447-0331-G1 Alternator, Ignition
35644A-0116-E1 Alternator, Ignition
35644A-0116-G1 Alternator, Ignition
35644A-0166-E1 Alternator, Ignition
35644A-0166-G1 Alternator, Ignition
35644A-0167-B1 Alternator, Ignition
35644A-0167-E1 Alternator, Ignition
35644A-0167-E9 Alternator, Ignition
35644A-0175-E1 Alternator, Ignition
35644A-0175-G1 Alternator, Ignition

Page 6 of 6